

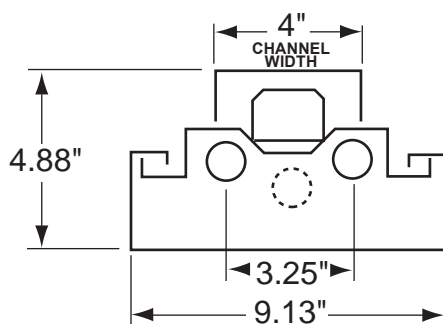


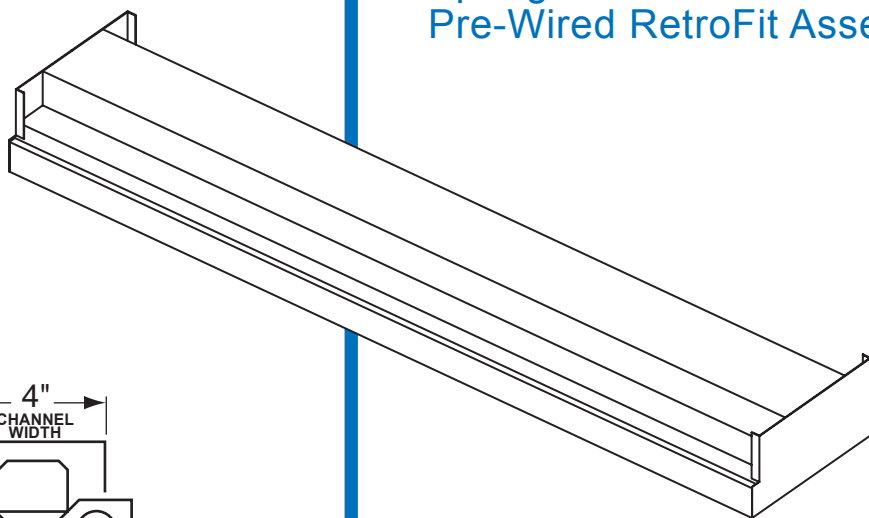

Bead Chain
Mounting
System

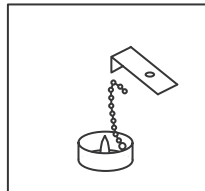

UNION MADE IN THE USA.

FEATURES:

- PATENTED BEAD CHAIN MOUNTING SYSTEM REDUCES INSTALLATION AND MAINTENANCE TIME
- CONVERT EXISTING COMMERCIAL STRIP TO A SURFACE MOUNTED WRAP STYLE FIXTURE
- PROVIDES ABILITY TO MAINTAIN CURRENT LIGHTING LAYOUT WHILE CHANGING THE FIXTURE LOOK
- ACRYLIC PRISMATIC HOOK-ON LENS CANNOT BE ACCIDENTALLY DISLODGED
- POST PAINTED HIGH REFLECTANCE POWDER COAT FINISH

SERIES R102

1X4 and 1X8 Channel to Wrap
Spring Mounted
Pre-Wired RetroFit Assembly

ORDERING:

| NOMINAL SIZE | LAMPS | CATALOG NUMBER |
|--------------|--------|----------------|
| 1' X 4' | 1-FO32 | R102-148T8 |
| 1' X 4' | 2-FO32 | R102-248T8 |
| 1' X 8' | 2-FO32 | R102-148-2T8 |
| 1' X 4' | 3-FO32 | R102-348T8 |
| 1' X 8' | 4-FO32 | R102-248-2T8 |
| 1' X 8' | 6-FO32 | R102-348-2T8 |

INSERT VOLTAGE AT END OF CATALOG NUMBER

NOTES:

1. DESIGNED TO FIT 3-3/4 INCH TO 7-1/2 INCH WIDE COMMERCIAL CHANNELS

series R102.ai
010312

MANUFACTURING
1715 KIBBY ROAD - MERCED - CALIFORNIA - 95340
(209) 723-9120 - FAX: (209) 723-9131

SALES OFFICE
14722 WICKS BLVD. - SAN LEANDRO - CALIFORNIA - 94577-6718
(510) 667-6950 - FAX: (510) 667-6959

INSTALLATION INSTRUCTIONS

INSTALLER TO INSURE THAT VOLTAGE OF RETROFIT ASSEMBLY IS THE SAME VOLTAGE AS THE UNIT TO BE RETROFITTED.

INSTALLER INSURE THAT WIDTH OF HOUSING IS BETWEEN 3-3/4" AND 7-1/2".

TURN OFF POWER TO FIXTURE BEING RETROFITTED.

REMOVE EXISTING LAMPS.

REMOVE EXISTING BALLAST/WIREWAY COVER(S).

CUT BALLAST BLACK & WHITE LEADS WITHIN 8 TO 9 INCHES OF BRANCH CIRCUIT CONDUCTORS.

REMOVE EXISTING LAMP HOLDERS, SOCKET PLATES AND END CAPS.

REMOVE BALLAST AND DISCARD IN ACCORDANCE WITH LOCAL CODES AND/OR HAZARDOUS MATERIAL REQUIREMENTS.

"TEK" SCREW MOUNTING ANGLE TO TOP OF HOUSING, INDEXING OFF 7/8" KNOCK OUT.

PULL 2 - 3 INCHES OF BEAD-CHAIN THROUGH KEY- HOLE SLOT IN MOUNTING ANGLE AND SECURE.

CONNECT BALLAST LEADS AND GROUND TO APPROPRIATE EXISTING CONNECTIONS THEREIN EXISTING HOUSING.

ONCE CONNECTION IS MADE PRESS R316 TIGHTLY AGAINST EXISTING HOUSING AND SECURE BY PULLING CHAIN THROUGH HOLE. ONCE HOUSING IS SNUG, SECURE CHAIN BY SLIDING INTO SLOT.

WHEN HOUSING IS SECURE COIL EXCESS BEAD-CHAIN INTO CAP AND PUSH ARROW CLIP INTO HOLE IN HOUSING.

TO REMOVE CAP PULL LIGHTLY AND DISENGAGE ARROW CLIP.

ONCE RETROKIT IS INSTALLED ATTACH END PLATE AND SECURE WRAPAROUND LENS.

INSTALL LAMPS AND TURN ON POWER.

NOTE

All fixtures must be installed, wired and grounded in accordance with the National Electric Code and all other applicable codes.

!!! WARNING !!!

RISK OF FIRE OR ELECTRICAL SHOCK. ELECTRICAL PARTS MAY BE DAMAGED WHEN DRILLING OR USING "TEK" SCREWS FOR INSTALLATION OF MOUNTING HARDWARE. CHECK ENCLOSED WIRING AND COMPONENTS. USE CAUTION WHEN DRILLING "TEK" SCREWS INTO A BLIND AREA. TO PREVENT WIRING DAMAGE DO NOT EXPOSE WIRING TO SHARP EDGES.

